

INSTRUCTIONS

WALLPAPER

Batch number


Some rolls of wallpaper from the Studio Ditte collection have a batch number. The batch number can be found on the label. Check if the rolls have the same batch number. This to prevent small color differences between the rolls.

Advice for wallpaper with colored background

Have you ordered wallpaper with a white background? Then the print runs in the length of the wallpaper roll and you do not have to take into account in which order you apply the strips on the wall.

If the wallpaper has a background color*, then the roll consists of 2 separate strips of wallpaper. The reason for this is that one strip of wallpaper is printed upside down compared to the other strip. This is done to prevent color lapse in the background. A technical story, but why do we tell you this? Because there is a small gradient in the background, it is good to take into account the order of the strips when you apply them on the wall. Always start with strip 1 and apply strip 2 and repeat this if you have more than one roll. See the picture below.

*Airplanes wallpaper dark, wild animals pink, race car dark, birdhouse, buttons, ribbons and vintage scraps wallpaper.

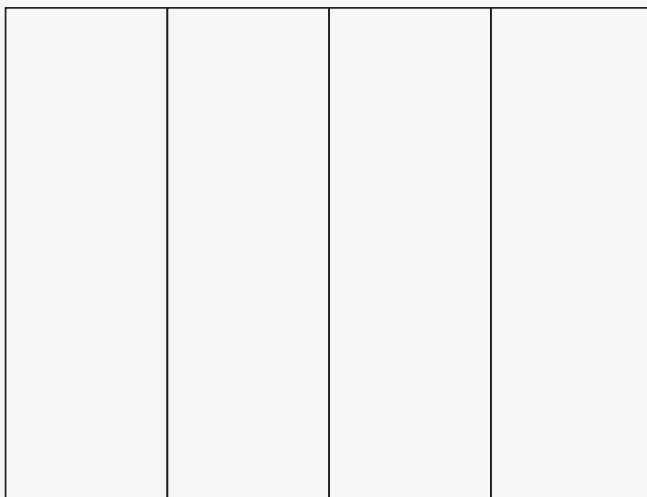

Strip 1

Strip 2

Strip 1

Strip 2

studio ditte 

Design by Studio Ditte

Produced in the Netherlands


See for more information www.studioditte.nl

INSTRUCTIONS

WALLPAPER

You need

- Glue for non-woven wallpaper (preferably use ready-made)
- Glue roller and wallpaper brush
- Seam roller
- Wallpaper ruler
- Boxcutter
- Soft cloth

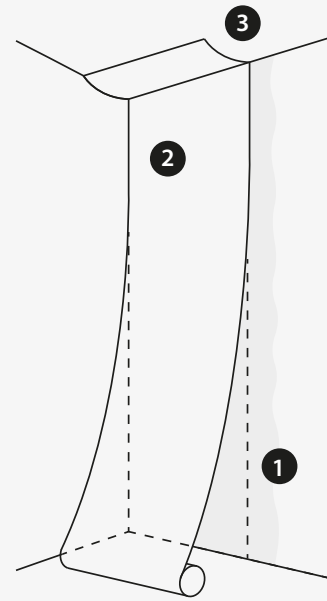

Step 1

Preferably use ready-made wallpaper glue for non-woven wallpaper. It is important that the wallpaper glue does not contain too much moisture. And make sure you do not use too much glue. Moisture can cause the wallpaper to shrink a little bit. This allows open seams between the strips of wallpaper when the glue has dried.

Apply glue on the wall with a roller. Use a wallpaper brush to apply glue in the corners where the wall meets the ceiling or floor. Apply approx. 15 cm more glue than the width of one strip of wallpaper.

Step 2

Apply the wallpaper directly to the wall. Start by applying the wallpaper from the top, and leave the rest of the strip hanging freely. Make sure you leave some extra wallpaper at the top and bottom, so you can cut it away later. Check if the wallpaper hangs down in a straight line, and aligns well with the previous strip. The strips must be glued tightly together.

Use a soft cloth to smooth the wallpaper. Press the strips from the middle to the sides, and from top to bottom. You can use a seam roller for pressing the seams.

Step 3

Cut the wallpaper along the edges of the ceiling, plinths, door and window frames. This is best done with a wallpaper ruler and a boxcutter. Wipe all remainders of glue from the wallpaper with a damp cloth, before the glue dries.

studio ditte 

Design by Studio Ditte

Produced in the Netherlands

See for more information www.studioditte.nl

2/2